L&L SKIN®



EMI
THERMAL SILICONE FACIAL
CLEANSING MASSAGER

Please read the user manual carefully before use

▶ Contents

Contents		1
Technical Specifications		2
Parts Description	2.	3
Functions .		3
Indications	<u>.</u> .	3
How to Use .	4、	5
Safety Precautions	5、	6
510	_	_


► Technical Specifications

No.	Item	Unit	Spec.
1	Rated voltage	V	3.7V
2	Rated current	mA	<1900mA
3	Waterproof	/	IPX7
4	Power supply	/	Lithium battery (built-in)
5	Charging time	Н	10±2H
6	6 Timer		5 min
7	Thermal temperature	C	55±5°C (at room temperature of 15-35°C)

▶ Parts Description

- ① Brush head ② Speed +
 - ⑤ Indicator light
- ③ ON/OFF/Mode button⑥ USB cable

- Speed = (
 Charging port (
 - Massage head
 Sucker
- Magnetic induction charging base

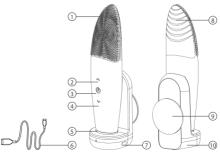

[Note] This product is with the lithium battery so that the USB is ONLY for the induction charging base. Do not put any metal on the charging base to avoid accident scald from high temperature.

Functions

Ell Thermal Silicone Facial Cleansing Brush comes with a flexible brush head at a 30-degree angle, featuring 12 circles of 0.6mm extremely fine touchpoints, and 55°C thermal care. It is designed to help create considerable foams easily and remove dirt, oil and makeup residue from your pores effectively for an unprecedented facial cleansing experience, making your skin silky-smooth and velvety.

▶ Indications

No.	Status	Indicators	
1	"Normal cleaning" mode	Yellow indicator light on when ON/OFF/Mode button is pressed to enter "normal cleansing" mode to enjoy vibration with thermal treatment → the device will be auto-off after 5 minutes.	
2	"Deep exfoliating" mode	White indicator light on when the ON/OFF/ Mode button is pressed again to switch to "deep exfoliating" mode to enjoy vibrations of continuously variable transmission→ the device will be auto-off after 5 minutes.	
3	Speed switching	Press "Speed+" or "speed-" to switch speed.	
4	Low battery	Indicator light twinkles when the power is lower than 30%; the device will be auto-off when the power is lower than 10%.	
5	In charging	Yellow indicator twinkles.	
6	Fully Charged	White indicator on.	

▶ How to Use

The device is ideal for both facial cleansing and thermal massage. You can follow the routine as below or choose one according to your skincare needs.

Facial cleaning



Wet your face with warm water.



Apply cleanser on and wet the brush head.



Turn on the device into "normal cleansing" mode.



Put the brush head right on your palm for 10 seconds till it foams.



Glide the device over your face with a suitable mode.



Switch to "deep exfoliating" mode within 5 minutes.



Glide the brush head along your hairline, sides of the nose, and chin to remove dirt hard to reach.



Turn off the device when finishing cleansing.



Rinse the device and your face with water after use.

▶ Thermal SPA



Apply some facial essence on your face



Turn on the device into "normal cleansing" mode.



Glide the massage head all over your skin in a bottom-up motion



The device will be auto-off after 5 minutes.



Rinse the device and then keep it dry.

[Tips] There are 8 intensities for each mode, and the device will work at a mode used last time; you are free to increase or decrease the speed within 5 minutes after which the device will be auto-off.

Safety Precautions

Do not use the device

- -if you have swelling, surgery, sunburn or other skin symptoms in the area to be treated.
- -together with silicon-soluble or grainy facial cleanser, peeling cream, etc. -directly on your eyeballs.
- -in the same area for a long time.

Remove off your solid objects such as watch, glasses, false eyelashes, and contact lenses before use.

Do not share the device with others.



Cleansing

Rinse the device with water right after each use, and place it on its charging base.

Never immerse the device in water for a long time.

▶ Storage

Keep the device in a dry and dust-free place.

Keep the device away from high temperature.

Keep the device out of the reach of children.

▶ FAQ

Q A		Solution	
Vibration becomes weak	Low battery	Charge the device for 2 hours and check it again.	
The device fails to work after charging.	1. The USB cable/ power plug/main body does not connect well, resulting in charging failure. 2. The device is not charged sufficiently. 3. The battery has reached the end of its service life (usually 2 years).	Ensure that the USB cable/power plug connects well, with indicator light twinkling. Please contact us for help if the device still doesn't work after full charging.	
The device stops working suddenly.	1. The device is running out of power. 2. There may be something wrong with the device.	Turn on the device again after full charging. Please contact us for help if the device still doesn't work after full charging.	
No thermal on the back side.	1. The thermal treatment will be obvious after 1 minute. 2. Low battery. 3. The room temperature is too low (≤5 C)to feel the thermal well. 4. There may be something wrong with the thermal system.	1. Turn on the device and wait for 1~2 minutes to check it again. 2. Turn on the device after charging it for 2 hours, and then wait for 1~2 minutes to check it again. 3. Use the device at room temperature of 5~50 °C and check it again. 4. Please contact us for help if the device still doesn't work after trying all the solutions mentioned above.	

L&L SKIN Thermal Silicone Facial Cleansing Massager

Product Name: Thermal Silicone Facial Cleansing Massager

Model No: FMI

Size: 42x35x155mm(L*W*H)

Brand owner: JAPAN L&L SKIN TECH CO, LTD.

Address: 3F Kabutocho Daiichi Heiwa Building

5-1 Nihonbashi Kabuto-cho

Chuo-ku, Tokyo, Japan 103-0026

www.llskinshop.eu Designed by L&L SKIN in Japan Assembled in China





